



Registered trademark

OPERATOR'S MANUAL

Cellu M6[®] Integral

**Please read the complete manual carefully
before using your equipment**

© LPG Systems 2024. LPG, Cellu M6, Integral and Keymodule are registered trademarks of LPG.
Reproduction, even in part, is strictly prohibited.

GU 0903 - EN
Edition C2 dated 01/24



Congratulations on the purchase of your Cellu M6 Integral s. This model represents the fruits of numerous years of experience in the design and production of cutaneous tissue treatment systems. You will experience fully the technical perfection and reliability of LPG Systems, which is the leader in this sector.

This operator's manual contains the operating description, basic maintenance instructions to be performed periodically and the safety instructions.


Your device is intended for use in the treatment of connective tissue. It should be used only by a professional who has attended the manufacturer's training provided by LPG Systems or an approved provider, if you live outside of France.

If you have any doubts whatsoever concerning the operation or maintenance of your equipment, please do not hesitate to contact LPG via the Customer Service Department of your distributor.

ATTENTION

In order to respond better to customer requirements and expectations, LPG Systems is continuously researching ways of improving the design and quality of its products. This will explain the few minor differences between your equipment and the item described in this guide.

→ PACKAGE CONTENTS

- One Cellu M6® Integral  unit
- One main Ergodrive head
- Two Keymodule™ (KM80, KM50)
- One set of auxiliary heads (TR15 et TR30)
- One Ergolift head
- Two Ergolift chambers (Lift 20 and Lift 10)
- One set of Lift heads
- One electrical power cord
- One POS marketing set

Depending on the version you have ("B", "2s", or "s"), (see serial number on the nameplate), some protocols are not activated and their accessories are not provided. Accordingly, the paragraphs describing them do not concern this version (see table on the next page).

	Version 2 s	Version s	Version s B
Ergodrive	✓	✓	✓
KM80	✓	✓	✓
KM50	✓	✓	✓
Ergolift Lift 20 Lift 10	✓	✓	✓
Lift heads TML30 TML20 TML10		✓	
GU	✓	✓	✓
Power cords	✓	✓	✓
POS	✓	✓	✓


→ TABLE OF CONTENTS

1. DESCRIPTION OF THE UNIT	5
2. DESCRIPTION OF THE CONTROLS	7
3. PRECAUTIONS OF USE	10
4. MAINTENANCE	14
5. TROUBLESHOOTING	23
6. TECHNICAL SPECIFICATIONS	24
7. CARE HEADS	25
8. ENDERMOWEAR	41
9. WARRANTY	47
GENERAL WARRANTY CONDITIONS	47
LIMITATION AND EXONERATION OF LIABILITY	49
WARRANTY ACTIVATION	50

ATTENTION

The manufacturer reserves the right to amend the product technical specifications without prior notice. Any reproduction – even in part – is prohibited. All the illustrations in this operator's manual are non-binding.

→ THE CELLU M6® INTEGRAL S

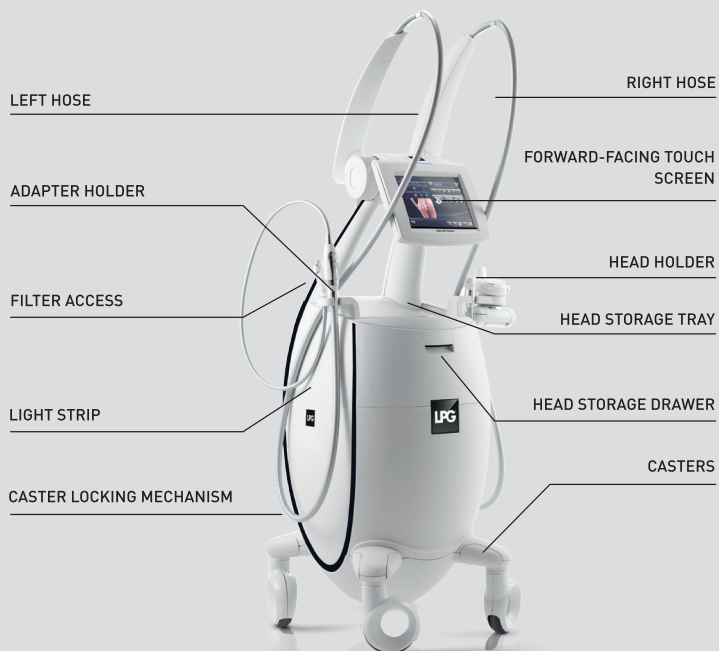


Before use, ensure that the power cord is completely unwound.



⚠ ATTENTION

The unit can only operate if it is connected to the mains by its supply cable and provided the ON switch has been actuated and the green voltage light is on.
After switching on the unit, please wait a few seconds for the screen to display information.

→ HEAD STORAGE DRAWER

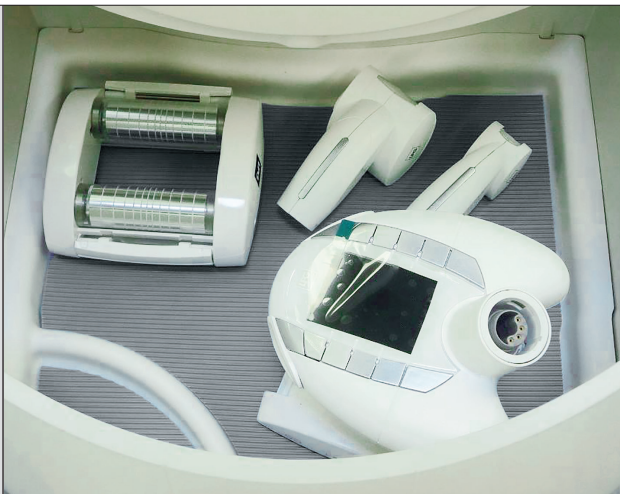

→ ACCESS TO FILTERS




RIGHT HOSE FILTER

LEFT HOSE FILTER

THE FILTERS ARE ACCESSIBLE VIA THE BACK OF THE UNIT.

→ CONTROL SCREEN

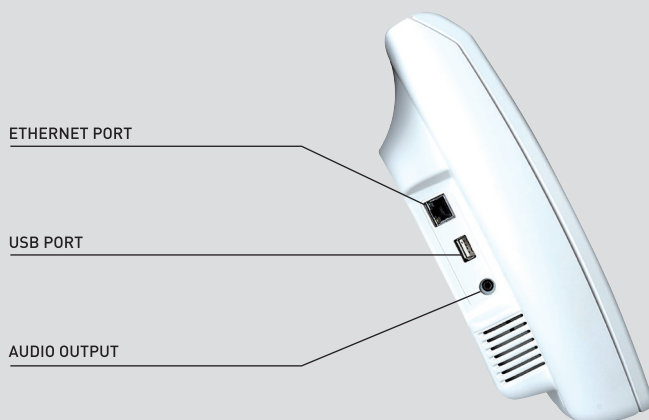


⚠ ATTENTION

For detailed instructions on using the touch interface, refer to the touch interface operating manual received during training and available from customer service.

→ ERGODRIVE HEAD



→ ADAPTER

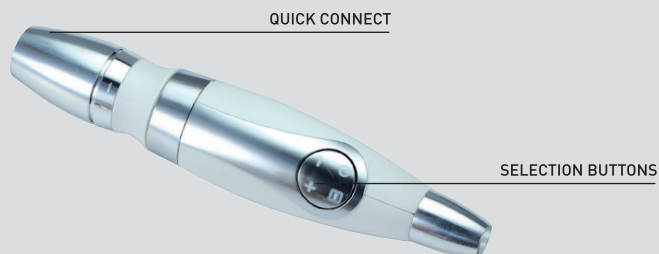

→ CASTERS

The Cellu M6 Integral S is equipped with locking casters.

Please follow the procedure indicated below to lock or unlock the casters.



UNLOCKED



TO LOCK



LOCKED

⚠ ATTENTION

In cases where the unit has not been moved for a long time, it is possible that marks may form on the ground where the casters are. This phenomenon is the result of a chemical reaction between the components of some floorings and those of the wheels of the Cellu M6 Integral S.

→ IMPORTANT SAFETY INFORMATION

All safety precautions must be observed whilst using electrical equipment. Please read all safety notices and precautions prior to use of the equipment.

DANGER - TO MINIMISE THE RISK OF ELECTRICAL SHOCK:

- Always disconnect the equipment from the electrical supply outlet after use and before cleaning and maintenance.
- Check that the supply voltage of the unit indicated on the data plate complies with the mains voltage.
- The unit must be connected by the power cord¹ supplied to a grounded outlet in accordance with current electrical standards. Electrical adapters must not be used with this equipment.

→ WARNING

TO MINIMISE THE RISK OF BURNS, FIRE, ELECTRICAL SHOCK OR INJURY

- The equipment must not be left unattended whilst connected to the electrical supply.
- Disconnect the unit from the electrical supply if it is not going to be used for a long period.
- Special attention is required whilst using the equipment with, or in the proximity of children or disabled persons.
- Never use the unit for purposes other than those recommended by LPG Systems. Only use the treatment heads supplied with your unit or those recommended by LPG.
- Never use the equipment if:
 - the electrical power cord or outlet is damaged.
 - the equipment does not function correctly.
 - the equipment is damaged or has fallen or been dropped.
 - the equipment has been exposed to excessive humidity.
 In such cases, return the equipment to an approved LPG service centre.
- Do not move the unit by pulling the electrical supply cable.
- Fully unwind the electrical power cord and keep it away from warm surfaces.
- Never use the equipment if the ventilation ports are obstructed. Ensure that the ventilation ports are kept clear of dust or other contaminants.
- Do not allow solid debris, liquid or other foreign bodies to fall or be sucked into the unit, as these could cause damage.
- Never use the equipment on a dusty, uneven floor, or in a moist atmosphere.
- Never use the equipment in the presence of aerosols or oxygen.
- Before disconnecting the unit from the electrical supply, set all controls to the 'off' position and unplug the unit.

ATTENTION

¹ **Europe** : VII-H05VVF3G1,50-C19 ; **Italy** : I/3/16-H05VVF3G1,50-C19 ;
Switzerland : 23G-H05VVF3G1,50-C19; **UK** BS13/13-H05VVF3G1,50-C19 ;
Japan 498GJ-VCTF3X2,00-C19 ; **USA, Canada, Mexico** : N5/15-SJT3X14AWG-C19

→ PRECAUTIONS FOR USE

ATTENTION: KEEP THESE INSTRUCTIONS

Your device should be used on clean, healthy skin. It is important to read and respect the following precautions and contraindications before using your device.

- Never touch the client and the device's unprotected cables or connectors simultaneously.
- Never use the auxiliary adapter as a treatment head or allow it to come into direct contact with the skin.
- Do not use the main head to carry out care on the scalp.
- Only use care heads supplied with your unit or recommended by LPG.
- Only use LPG Systems care garments.
- LPG Systems will not be liable for any inappropriate use of the equipment.
- With respect to cared tissue, some parameters may cause pain or tissue lesions.
- The operator must be particularly attentive to the sensations felt by the person undergoing care.
- The operator must ensure that the parameters (intensity, sequentiality, differential...) are always adapted to the cutaneous tissue being cared.
- Do not lean, rest, or sit on the unit.
- When crossing a threshold or step, we recommend moving the unit carefully to avoid tipping.
- Do not use the USB and ethernet connections during care.
- Do not operate the unit in unsuitable environmental conditions (see technical specifications).
- Do not use the care heads directly on the skin. Wear the care suit provided by LPG Systems, ENDERMOWEAR

→ CONTRA-INDICATIONS

- Do not treat open wounds, the eyes, intra-cavity areas, mucous membranes, the genitals or breasts.
- In the event of pregnancy, do not treat the lumbar-abdominal region. Consult with a doctor with regard to this treatment.
- Do not treat a client with an infectious disease, a growing tumour, a phlebitis etc.
- Consult with a doctor in cases where the client has a case history of tumours or is in remission.
- Do not treat any swollen or inflamed areas without seeking medical advice and without having had training in specific LPG techniques in this particular area.
- Do not treat a client suffering from inexplicable and persistent pain without seeking medical advice and without training in specific LPG techniques in this particular area.
- Do not treat a client following invasive medical treatment without seeking the medical advice of the doctor or surgeon who performed the care and without training in specific LPG techniques in this particular area.
- For a more detailed list of the indications and contra-indications of Endermologie, please refer to the training manuals.
- As this list is not exhaustive, always seek out medical advice in the event of doubt.
- This device should not be used on skin rashes, herpes, inflamed or infected acne, or vitiligo.
- Do not treat a client with skin cancer, a visible tumor, or other cancerous lesions. Consult with a doctor in cases where the client has a case history of tumours or is in remission.
- To avoid bruising, exercise caution when determining a client's level of sensitivity and avoid use on clients taking anticoagulant drugs.
- Do not use in the case of unexplained calve pain. Seek medical advice.
- Do not treat people with circulatory problems without first consulting their doctor.
- Because of the risk of interference, it is important that the professional ensures the client is not equipped with a personal medical device such as a pacemaker.
- If this is the case, the professional should obtain details about the device in question to ensure that any interference will not affect the correct use of the equipment.
- **Caution for service:** risk of explosion if the Microbattery Button Cell located on the HMI board (type 3V 190 mAH, VARTA 6 032 101 501) is replaced by an incorrect type. Dispose used Cell according to country regulation.

⚠ ATTENTION

This unit contains programs to help the operator obtain the best anticipated results for each case undergoing care. Under no circumstances may these programs be construed as a guarantee of successful treatment, which varies, depending on the morphology, physiology and eating behaviour of each client.

→ ELECTROMAGNETIC COMPATIBILITY

- The Cellu M6 Integral S uses RF energy only for its internal function. Therefore its RF emissions are very low and not likely to cause any interference in nearby electronic equipment.
- The Cellu M6 Integral S is suitable for use in all establishments including domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
- The Cellu M6 Integral S must be used on a wooden, concrete or ceramic flooring. If the floor covering is of synthetic material the relative humidity must be at least 30%.
- The Cellu M6 Integral S must be connected to an electrical supply equivalent in quality to typical commercial or hospital supplies.
- If the operator of the Cellu M6 Integral S requires continuous function during power supply network failure, it is recommended that an alternative failsafe electrical supply or battery power supply be provided.
- Portable or mobile RF communication devices must not be used in close proximity to the Cellu M6 Integral S or its cables.
- Interference may be encountered in proximity to devices marked with the following symbol:



→ INDEX

IDENTIFICATION RATING PLATE	15
CLEANING THE UNIT	16
REPLACING THE FILTER CARTRIDGES AND FOAM	17
CONNECTING/DISCONNECTING THE ERGODRIVE HEAD	19
DISCONNECTING THE HOSES	20
CONNECTING/DISCONNECTING THE ADAPTER	21
REPLACING THE POWER CORD	22
MAINTENANCE LOG SHEET	22

→ IDENTIFICATION RATING PLATE

Your unit is identified by a serial number shown on the rating plate.

The rating plate also shows the permitted supply voltage for the unit.

If you need to contact LPG Systems because of a technical problem, please indicate the serial number of your Cellu M6 Integral S.

This serial number provides information on the year and month of manufacture of your unit.

The letter indicates the year the device was manufactured.

Z=2009, A=2010, B=2011, etc.

The two digits indicate the production month:
01=January; 02=February; 03=March; etc.



This icon indicates that the unit was sold after August 13, 2006. In conformity with the 2002/96/CE directive, it cannot be thrown away with standard household waste but must be disposed of by means of recycling. When your device reaches the end of its useful life, it must be brought to an appropriate recycling center or returned to your dealer. By doing so, you help the environment by contributing to the conservation of natural resources and the protection of human health.

SERIAL NUMBER

LPG SYSTEMS FABRIQUE EN FRANCE NACED IN FRANCE フランス製		TECHNOPARC DE LA PLANE BP30 30 RUE D'OR ABEL 26902 VALENCE CEDEX 09			
TYPE: CelluM6 IntegralS モデル		IP 20			
N° DE SERIE SERIAL NUMBER シリアル番号		INTZ060014			
100-240V 50-60Hz 710 - 670 W					

VOLTAGE, FREQUENCY
AND POWER



This icon indicates that some specific warnings or precautions associated with this device are not on the label.



This icon means "Refer to the user manual."



This symbol means «Do Not Push»

⚠ ATTENTION

The identification rating plate is located on the underside, at the back of the unit.
Identification rating plates may vary. The approved one is one on your machine.

→ CLEANING THE UNIT

It is recommended that you clean your unit as often as possible, not only for reasons of hygiene and aesthetics but also because cleaning the unit will help keep it in a good state of repair and extend its useful life.

Using a vacuum cleaner with a fine nozzle, clean the following sections:

- Interior of the head storage drawer.
- Interior of the head storage tray.
- Interior of the filter access door.

Using a moist sponge, clean the following sections:

- All the external hoods.
- Hoses.
- The electrical supply cable.

Using a cloth soaked with a small amount of alcohol-free domestic cleaning product, clean the following sections:

- Control screen and control panel.
- Interior of the head storage drawer.
- Interior of the head storage tray.
- Interior of the filter access door.

→ REPLACING THE FILTER CARTRIDGES AND FOAM

Your device contains two filter cartridges and one filter foam.
These components guarantee the efficiency of your unit and prolongs its useful life.

Ensure that they are changed as soon as the command screen displays one of these messages (fig 1-2) :

Icon indicating a filter change is required (fig. 2).

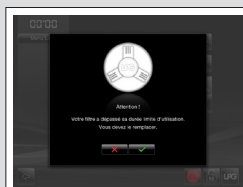


FIG. 1

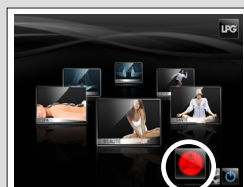


FIG. 2

CHANGE THE FILTERS

Access the 'filter change' menu as follows :

Select the 'maintenance' menu by pressing the icon indicated (fig. 3).

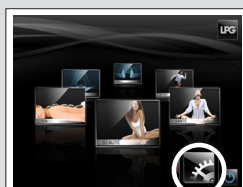


FIG. 3

PRESS THIS ICON



FIG. 4

PRESS THIS ICON

Select the 'filter' menu by pressing the icon indicated (fig. 4).

The 'filter change' screen indicates which filter requires changing (fig. 5).

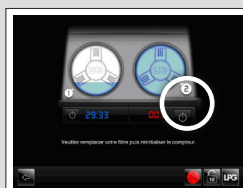


FIG. 5

FILTER TO CHANGE

⚠ ATTENTION

The device must never be used without a filter. If no filter is fitted, the device must be switched off.

→ REPLACING THE FILTER CARTRIDGES AND FOAM (CONT'D)

Replace the filter cartridges as follows :

1. Open the filter access door.
2. Unscrew and remove the filter cartridges and replace them with new ones.
3. Remove the filter foam and replace it with a new one.
4. Remember to purchase new filter cartridges from the LPG Systems Customer Service Department so you always have a spare.



5. Once the filter cartridge is replaced, the filter meter should be reset by pressing the icon indicated : (fig. 5).



FILTER METER

→ CONNECTING/DISCONNECTING THE MOTORIZED TREATMENT HEADS

To **connect** the heads to the hose, follow the procedure below:

Position the locking ring in the locked position (fig. 1).

Position the end of the hose so that the hose key is lined-up with the key slot of the care head connection (fig. 2).

Push the hose into the care head connection until it clicks into place.

To **disconnect** the heads, position the locking ring in the unlocked position (fig. 3).

Pull the locking ring towards the hose (fig. 4).

Carefully remove the hose by pulling it by the white ring (fig. 5).

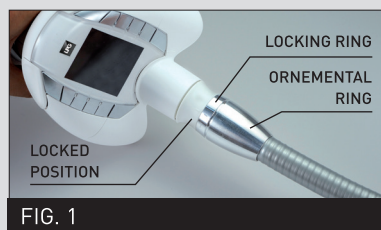
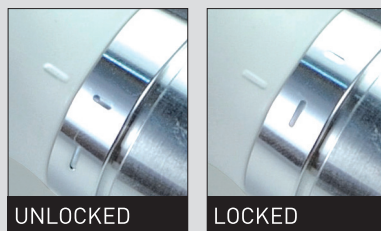


FIG. 1

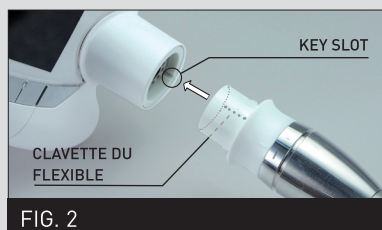


FIG. 2



FIG. 3



FIG. 4

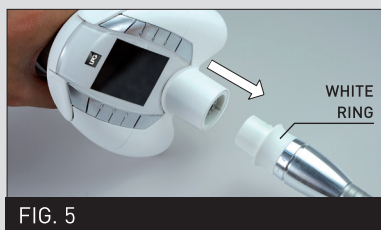


FIG. 5

→ DISCONNECTING THE HOSES

- Unscrew the screws on the movable arms (Fig. 1).
- Unclip the covers from the movable arms (Fig. 2 - 3).
- Disconnect the electrical connection, as described in the previous section (Fig. 4).




→ CONNECTING/DISCONNECTING THE ADAPTER

To connect or disconnect the hose adapter, follow the procedures below.

Only the auxiliary heads, the micronozzle tip, and the Lift heads can be connected to the adapter.

The connection is made with a simple push/pull movement.

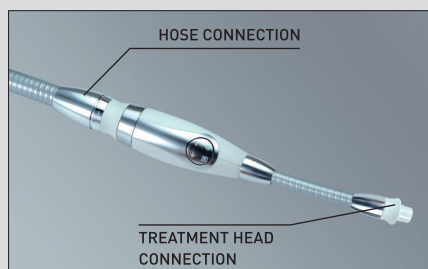

→ REPLACING THE POWER CORD

If the power cord of your device is damaged, please contact LPG Systems Customer Service for a replacement.

LPG Systems Customer Service:
+33 (0)4 75 78 69 89

→ MAINTENANCE LOG SHEET

Replacement of filter cartridges: To be done when the warning message appears.

Replacement of Endermolift Kit: To be done when the flaps no longer treat the skin properly. They should be replaced after approximately every **20 hours** of use.

DATE	NO. OF HOURS	OPERATIONS PERFORMED

→ WHAT IF I'VE PROBLEM?

If your unit is not working properly, proceed with the following checks before calling Customer Services:

- Is the unit properly connected to a mains plug?
- Is the mains plug live?
- Is the ON switch lit up?
- Are the filter cartridges clean and correctly placed?
- Are the hoses free of obstruction?
- Are the hoses properly connected?
- Is the Keymodule of the main head correctly fitted?

Once these checks have been carried out and if the malfunction persists, please contact Customer Services of LPG Systems or the nearest authorized dealer, indicating the model of your unit and its serial number.

LPG Systems Customer Service:
+33 (0)4 75 78 69 89

→ TECHNICAL SPECIFICATIONS

Dimensions; length x width x height: 780 x 680 x 1660 mm
 Net weight: 76,1 kg
 Maximum set depression: 69 kPa (690 mbar)
 Cooling: By mechanical ventilation incorporated in the pump
 Protection index: IP20
 Electrical protection class: 1
 Operating temperature: +10°C to +30°C
 Storage temperature: -20°C to +70°C
 Electrical features: 100-240V / 50-60Hz / 710-670W

Operating environment:

Ambient temperature: 10 to 30° C for normal operation.
 Ambient relative humidity: 30 to 75% without condensation.
 Atmospheric pressure: no significant influence for operation.
 Max altitude: 2,500 m

Unit fitted with patented care heads.

Le Cellu M6 Integral S is marked  in compliance with the applicable texts and standards as part of the EMC 2004/108/EC and Low Voltage 2006/95/EC directives.

CARE HEADS

Cellu M6[®] Integral




Registered trademark

→ INDEX

DESCRIPTION OF THE ERGODRIVE HEAD	28
DESCRIPTION OF THE KEYMODULE™	29
DESCRIPTION OF THE ADAPTER	32
ERGOLIFT HEAD DESCRIPTION	33
CARE CHAMBERS DESCRIPTION	33
DESCRIPTION OF THE LIFT HEADS	34
MAINTENANCE CLEANING THE ERGOLIFT HEAD AND ERGOLIFT CHAMBERS	34
CLEANING THE ERGOLIFT HEAD	35
REMOVING THE FLAPS	36
CLEANING THE ERGODRIVE HEAD	38
REPLACING THE KEYMODULE™	41

→ DESCRIPTION OF THE ERGODRIVE HEAD

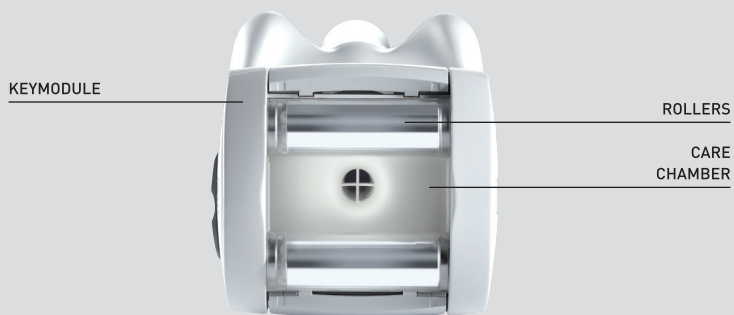

→ DESCRIPTION OF THE KEYMODULE™

The Keymodule is the interchangeable lower section of the Ergodrive head. It comprises the motorised rollers and sealing valves.


You have two Keymodules (KM 50, KM 80) the characteristics of which differ in several ways:

- Diameter and texture of the rollers.
- Roller length.

Installation:

All Keymodules are designed to be compatible with the treatment head. Attach the Keymodule as shown below.

To remove the Keymodule release the latches.

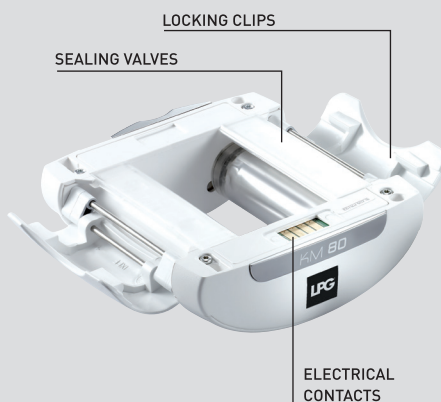

→ SLIDER SETTINGS

The Keymodule has a slider which can be adjusted to 4 positions, making it possible to adjust the spacing between the motorized rollers.

When the slider is positioned to the left (**fig. 1**), this allows the maximum level of mobility in the rollers.

When the slider is positioned to the right (**fig. 2**) the rollers cannot move.

When the slider is in an intermediate position the rollers have reduced mobility.



CURSOR IN LEFT
HAND POSITION



FIG. 1



FIG. 2

→ FREE ROTATION FUNCTION

The Ergodrive head includes a function that allows the Keymodule to rotate freely.

To do this, lift the lock ring upward until it clicks into position **(fig. 1 - 2)**.

The head can now rotate freely **(fig. 3)**.

To lower the lock ring and lock the position of the head, press the lock key **(fig. 4)**.



FIG. 1



FIG. 2



FIG. 3



FIG. 4

The head rotation can be locked in any of the 4 positions below:



ROTATION 0



ROTATION 1



ROTATION 2



ROTATION 3




ROTATION 4


These four positions can be found by:

- following the preceding instructions for free rotation, then pressing the lock key and rotating the head until it clicks into the desired position.
- lifting the lock ring halfway and then rotating the head to the desired position until it clicks into place.


→ DESCRIPTION OF THE ADAPTER

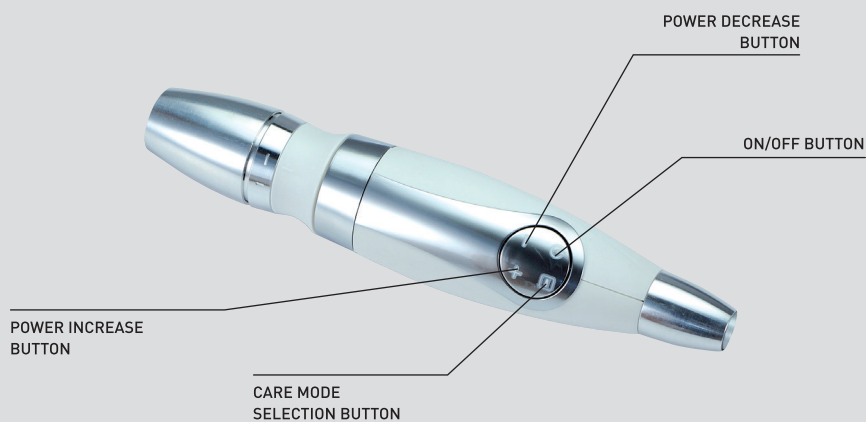


→ ERGOLIFT HEAD DESCRIPTION

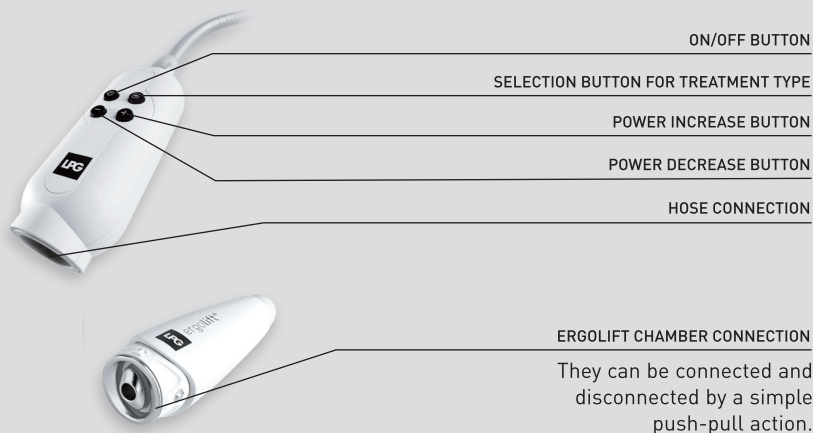

→ ERGOLIFT CHAMBERS DESCRIPTION

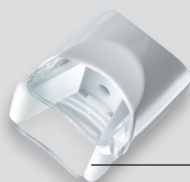


Lift 20
Treatment chamber with removable flap

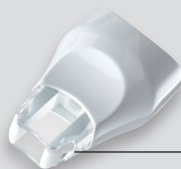

Lift 10
Treatment chamber with removable flap

Only the LIFT20 and LIFT10 can be connected to the Ergolift head. They can be connected and disconnected by a simple push-pull action.

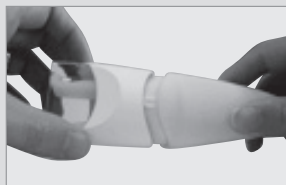

→ DESCRIPTION OF LIFT HEADS

Adjusting the flap:

To ensure that the flap retains its position, thereby optimizing performance, it is important to adjust the dial settings according to the care intensity:

- Turn the dial from A to E to increase the flap's return force.
- Turn the dial from E to A to decrease the flap's return force.



TML10
WITH REMOVABLE FLAPS



TML20
WITH REMOVABLE FLAPS



TML30
WITH REMOVABLE FLAPS

→ MAINTENANCE

For reasons of hygiene, the care heads should be cleaned after each use, using antiseptic wipes with a bactericidal and fungicidal solution.

Special attention must be given to the cleanliness of the parts that are in contact with the client.

→ CLEANING THE ERGOLIFT HEAD AND ERGOLIFT CHAMBERS



For reasons of hygiene, the treatment heads should be cleaned after each use, using antiseptic wipes impregnated with a bactericidal and fungicidal solution. Special attention must be given to the cleanliness of the parts that are in contact with the patient.

Before each use, clean the flap and Ergolift chamber:

1. Disconnect the chamber from the Ergolift treatment head. **(fig. 1)**
2. Remove the flap thanks to the dedicated tool. **(fig.2)**
3. Thoroughly clean the Ergolift chamber, the flap and the tool for at least one minute with the wipes as describe here below. **(fig.3)**
4. Put the flap back in the Ergolift chamber by following the same steps in the reverse order **(fig.4)**



→ CLEANING THE ERGOLIFT HEAD AND ERGOLIFT CHAMBERS (CONT'D)

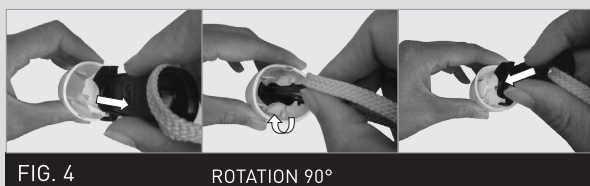
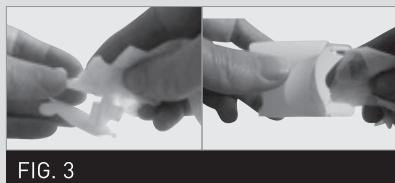


⚠ ATTENTION

The use of aggressive products, such as acetone, trichloroethylene, or alcohol at 90°, and abrasive sponges, ultrasound or UV lamps is strictly prohibited. All cleaned and/or disinfected heads should be placed in the storage drawer to avoid any confusion.

→ REMOVING THE TML20 AND TML30 FLAPS

1. Take the Lift head and insert the beveled side of the correct removal tool into the opening between the flaps.
2. Pull out the tool, and the flaps will come out with it.
3. Remove the flaps from the tool and clean them carefully with a wipe.
4. Take the smooth side of the tool and place the flaps back into position on the tool.
5. Insert the flaps back into the care head until they are in the correct

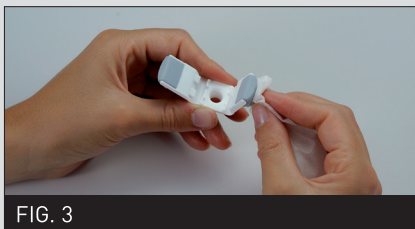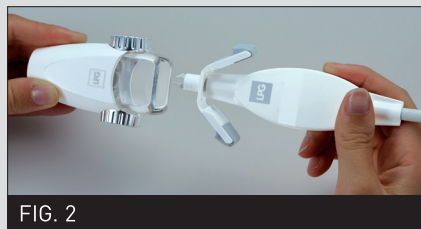

→ REMOVING THE TML10 FLAPS

1. Take the Lift head and insert the beveled side of the correct removal tool into the opening between the flaps.
2. Pull out the tool, and the flaps will come out with it.
3. Remove the flaps from the tool and clean them carefully with a wipe.
4. Take the smooth side of the tool and place the flaps back into position on the tool.
5. Insert the flaps back into the care head



FIG. 1



FIG. 2

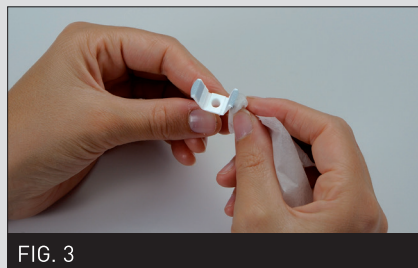


FIG. 3



FIG. 4



FIG. 5

→ CLEANING THE ERGODRIVE HEAD

Cleaning the sealing valves:

1. Release the Keymodule (fig. 1).
2. Move the rollers to the center.
3. Remove the corresponding sealing valve by handling it as shown on the photo. Repeat the operation for the other valve (fig. 2).
4. Meticulously clean the flaps and their housing for at least 1 minute using LPG wipes soaked in a bactericide and fungicide solution (fig. 3 - 4).



Replace the sealing valves after **100 hours** operation.



→ CLEANING THE ERGODRIVE HEAD (CONT'D)

Cleaning the Keymodule:

1. Turn over the Keymodule and thoroughly clean the following parts for at least 1 minute with the LPG wipes soaked in a bactericide and fungicide solution:
 - a) The housing on both sides of the rollers (fig. 1)
 - b) The rollers (rotate them manually to clean the entire surface) (fig. 2).
 - c) The sealing ring between the Keymodule and head housing.
 - d) The plastic covering on the Keymodule.
2. Turn the Keymodule again and refit the sealing valves.
3. Ensure that the the sealing joint between the Keymodule and main head is also cleaned.
4. Check that the electrical contacts are clean and dry and proceed in the reverse sequence to refit the Keymodule onto the main head.
5. Clean the storage drawer using LPG wipes, then place the head in it.

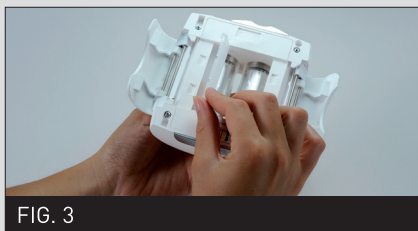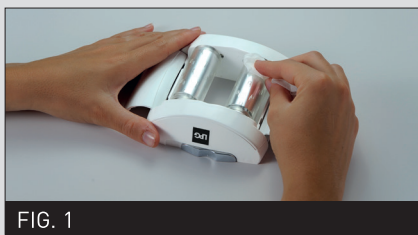

→ REPLACING THE KEYMODULE™

The Keymodule is a high-technology unit comprising numerous mobile micro-mechanical parts.

The unit must be returned to our Technical Support Center if certain worn items require replacing.

The head may start to lose some of its characteristics at approximately **1000 hours** of operation.

ATTENTION

- All the procedures described in this section must be carried out with the machine turned off and the power cord unplugged.
- Do not use corrosive products such as acetone, trichloroethylene, or rubbing alcohol, nor abrasive sponges.

→ ENDERMOWEAR

LPG Endermowear is available in several sizes for men and women and has been specially designed for body treatments. It is intended for personal use, guarantees hygiene, and its opaque areas cover the client's intimate parts during the treatment. Endermowear's unique material guarantees excellent adhesion to the skin which facilitates movement of the care head.

The products are delivered in a bag that the customer can personalize by putting their name on the label. It becomes the customer's property and can be used for several sessions. For esthetic reasons and hygiene, it should be washed after each use. Please refer to the washing instructions indicated on the bag label.

→ GENERAL WARRANTY CONDITIONS

You have recently acquired an appliance distributed by LPG Systems or an LPG Systems approved distributor. It is the purchaser/user's responsibility to find out from the local authorities the conditions and professional qualifications that should be met before using the appliance.

The purchase of this equipment implies the legal acceptance by the purchaser/professional user of these general warranty conditions. If the appliance was sold to you by an approved LPG Systems distributor, the purchaser/user should refer to the supplier's warranty conditions. These may in no way increase the undertakings made in these present warranty conditions. The warranty can only be implemented and is only valid if the warranty slip has been duly filled out and returned to LPG Systems within two weeks of delivery, irrespective of the country. Warranty slips that are only partially completed will be rejected.

The appliance is guaranteed against manufacturing flaws and defects in the raw materials. The warranty extends for the shorter of the following two periods: one (1) year OR two thousand (2000) hours of use from the invoice date. During this period, LPG Systems undertakes to exchange or repair free of charge, as quickly as possible, any part that LPG Systems acknowledges as

defective, however LPG Systems does not undertake to replace the entire appliance. Traveling and living expenses for our technicians and transportation costs of the appliance or parts to and from the after-sales service workshop are not covered by this warranty.

Replacements and repairs performed within this warranty, with or without immobilization of the equipment, shall not have the effect of extending the warranty period. Replaced parts become the property of LPG Systems or the approved distributor. No compensation shall be paid for loss of use. The purchaser/user is required to allow LPG Systems the necessary time and means to carry out all repairs and deliveries of replacement spare parts. Failure to comply will absolve us from our obligations under the warranty.

The only courts of competent jurisdiction are those within the legal district of LPG Systems' head office regardless of any jurisdiction clauses in any other document.

→ GENERAL WARRANTY CONDITIONS (CONT'D)

Warranty exclusions:

- Damage occurring during transportation. Transportation of this equipment and/or spare parts is at the recipient's own risk. Before taking delivery, it is the recipient's responsibility to verify the state of the goods and to make a claim against the transport company in the manner usual in the delivery country.
- Non-observance of the installation and operating instructions, failure to carry out maintenance and/or negligence in maintaining the appliance and/or its filter cartridges, connection to a faulty electricity supply or a non-earthed electricity supply or a power supply whose voltage is different to the one indicated on the appliance.
- If an appliance is sold before the end of the warranty period, the warranty is transferred to the purchaser for the remaining warranty period, on the condition that:
 - i) the original invoice is provided.
 - ii) That the initial vendor is informed of the sale.
- Modification, mounting of accessories or dismantling of the equipment.
- Any operation and/or intervention not specified in the LPG Systems Operating Instructions and performed on the equipment by the purchaser/user and/or any party not approved by LPG Systems.
- Use of consumables, spare parts, inappropriate components or parts not supplied by LPG Systems.
- Blockage of the appliance through aspiration of a foreign body.
- Normal wear and tear of any of the equipment's parts resulting from normal usage.
- Falls, impacts, lightning, fire, force majeure, water damage and natural disasters.

→ LIMITATION AND EXONERATION OF LIABILITY

Non-compliance with the general guarantee conditions during the term of the warranty and following expiry of the latter, may lead to LPG Systems being exonerated of any liability in the event of damage attributed to the products supplied.

LPG Systems will not be held liable with respect to equipment/material losses or physical accidents (i), following installation that does not comply with the statutory or regulatory provisions of the country where the unit is to be used or (ii) which could jeopardize a Cellu M6 Integral / unit, which was the subject of intervention work not scheduled in the LPG Systems operator's manual and/or carried out by the operator or a third party not authorized by LPG Systems.

LPG Systems will be absolved of its liability in the event of use exceeding the level of professional competence/qualification of the operator or resulting from the incorrect use of the unit.

→ WARRANTY ACTIVATION

You can activate your warranty online by connecting to our warranty webpage:

<http://warranty.lpgsystems.com>

→ OR FILL IN THE FORM AND RETURN TO LPG SYSTEMS



Name*:

Address*:

Country*:

Tel*:

Email:

Type of business:

Profession:

Type of unit: **Cellu M6 INTEGRAL S**

Serial number*:

Date:

The personal data collected in this form are sent to LPG Systems, which is responsible for processing it in order to manage customers relations, including after-sales service and warranties. Information with an asterisk must be provided in order for this form to be processed. According to modified French law 78-17 from January 6, 1978 relating to computers, digital files, and freedoms, also known as the "Informatique et Libertés" law, you have a right of access, rectify, and remove personal data about you by contacting LPG Systems in writing at the following address: LPG SYSTEMS - 30, rue Dr Abel - Technoparc de la Plaine - 26000 VALENCE (FRANCE).

ATTENTION

To validate the warranty, detach this slip and return to the address below within 15 days following use of the unit:

**LPG SYSTEMS SA - Technoparc de la Plaine
30, rue du docteur Abel - CS 90035 - 26902 VALENCE Cedex 9 - France**



HEADQUARTERS: LPG SYSTEMS SAS

TECHNOPARC DE LA PLAINE

30, RUE DU DR. ABEL - CS 90035 - 26902 VALENCE CEDEX 09 - FRANCE

TEL.: +33 (0)4 75 78 69 00 - FAX: +33 (0)4 75 42 80 85

INTERNATIONAL/MARKETING

ECOLUCIOLES - BAT A

955 RTE DES LUCIOLES - BP 243 - 06905 SOPHIA-ANTIPOLIS - FRANCE

TEL.: +33 (0)4 92 38 39 00 - FAX: +33 (0)4 92 96 09 65

