



Registered trademark

# Cellu M6<sup>®</sup> Endermolab

## OPERATOR'S MANUAL

**Please read the complete manual carefully  
before using your equipment**

© LPG Systems 2024. LPG, Cellu M6, Endermolab and Keymodule are registered trademarks of LPG.  
Reproduction, even in part, is strictly prohibited.

GU 0905 - EN  
Edition C1 dated 01/24



Congratulations on the purchase of your Cellu M6 Endermolab s.

This model represents the fruits of numerous years of experience in the design and production of cutaneous tissue care systems. You will experience fully the technical perfection and reliability of LPG Systems, which is the leader in this sector. This operator's manual contains the operating description, basic maintenance instructions to be performed periodically and the safety instructions. Your device is intended for use in the care of connective tissue. It should be used only by a professional who has attended the manufacturer's training provided by LPG Systems or an approved provider, if you live outside of France.

If you have any doubts whatsoever concerning the operation or maintenance of your equipment, please do not hesitate to contact LPG via the Customer Service Department of your distributor.

#### ATTENTION

In order to respond better to customer requirements and expectations, LPG Systems is continuously researching ways of improving the design and quality of its products. This will explain the few minor differences between your equipment and the item described in this guide.

## → PACKAGE CONTENTS

- One Cellu M6® Endermolab s unit
- One main Ergodrive head
- Two Keymodule™ (KM80, KM50)
- One Ergolift head
- Two Ergolift chambers (Lift 20 and Lift 10)
- One set of Lift heads
- One operator's manual
- Two electrical power cords
- One POS marketing set

Depending on the version you have ("B", "2s", or "s"), (see serial number on the nameplate), some protocols are not activated and their accessories are not provided. Accordingly, the paragraphs describing them do not concern this version (see table on the next page).

	Version 2 s	Version s	Version s B
Ergodrive	✓	✓	✓
KM80	✓	✓	✓
KM50	✓	✓	✓
Ergolift Lift 20 Lift 10	✓	✓	✓
Lift heads TML30 TML20 TML10		✓	
GU	✓	✓	✓
Power cords	✓	✓	✓
POS	✓	✓	✓




## → TABLE OF CONTENTS

<b>1. DESCRIPTION OF THE UNIT .....</b>	<b>5</b>
<b>2. DESCRIPTION OF THE CONTROLS .....</b>	<b>7</b>
<b>3. PRECAUTIONS OF USE .....</b>	<b>13</b>
<b>4. MAINTENANCE .....</b>	<b>18</b>
<b>5. TROUBLESHOOTING .....</b>	<b>28</b>
<b>6. TECHNICAL SPECIFICATIONS .....</b>	<b>29</b>
<b>7. CARE HEADS .....</b>	<b>31</b>
<b>8. ENDERMOWEAR .....</b>	<b>47</b>
<b>9. WARRANTY .....</b>	<b>48</b>
GENERAL WARRANTY CONDITIONS .....	49
LIMITATION AND EXONERATION OF LIABILITY .....	50
WARRANTY ACTIVATION .....	51

### ATTENTION

The manufacturer reserves the right to amend the product technical specifications without prior notice. Any reproduction – even in part – is prohibited. All the illustrations in this operator's manual are non-binding.

## → THE CELLU M6 ENDERMOLAB

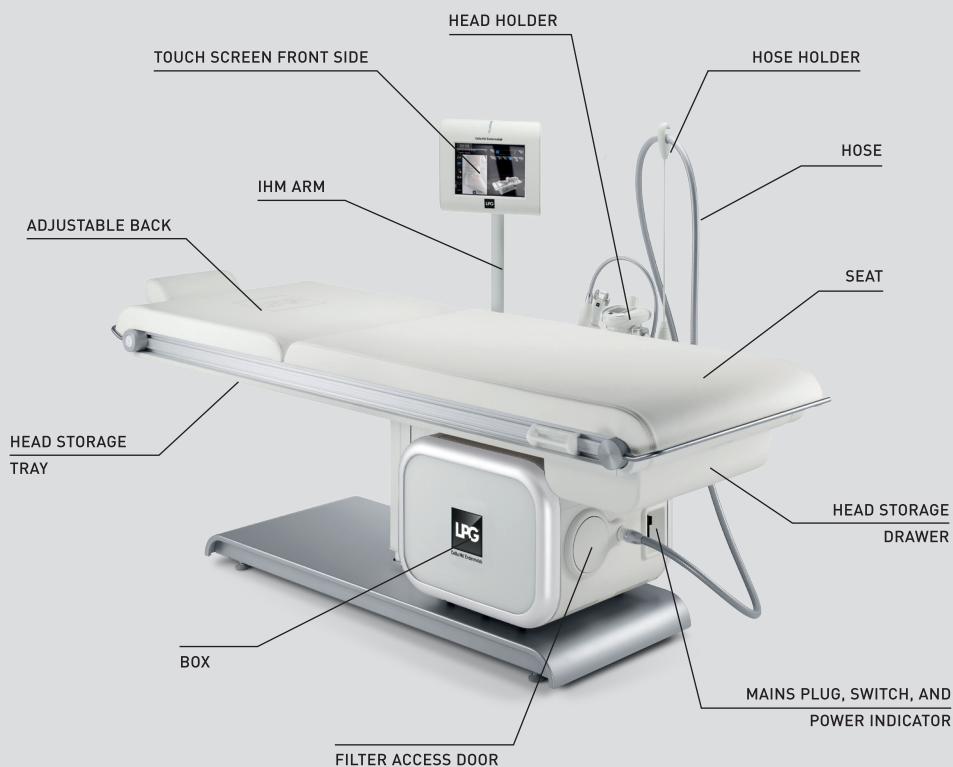

### ATTENTION

The unit can only operate if it is connected to the mains by its power cord and provided the ON switch has been actuated and the green voltage light is on.  
After switching on the unit, please wait a few seconds for the screen to display information.

## → HEAD STORAGE TRAY AND DRAWER




HEAD STORAGE TRAY



HEAD STORAGE DRAWER


## → ACCESS TO FILTERS

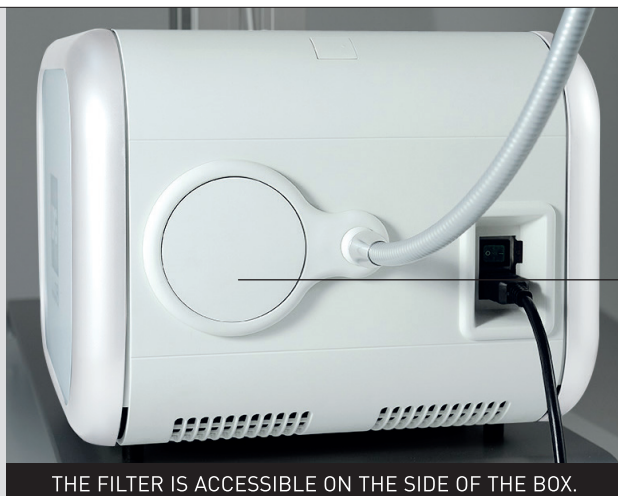

FILTER ACCESS DOOR

THE FILTER IS ACCESSIBLE ON THE SIDE OF THE BOX.

## → CONTROL SCREEN

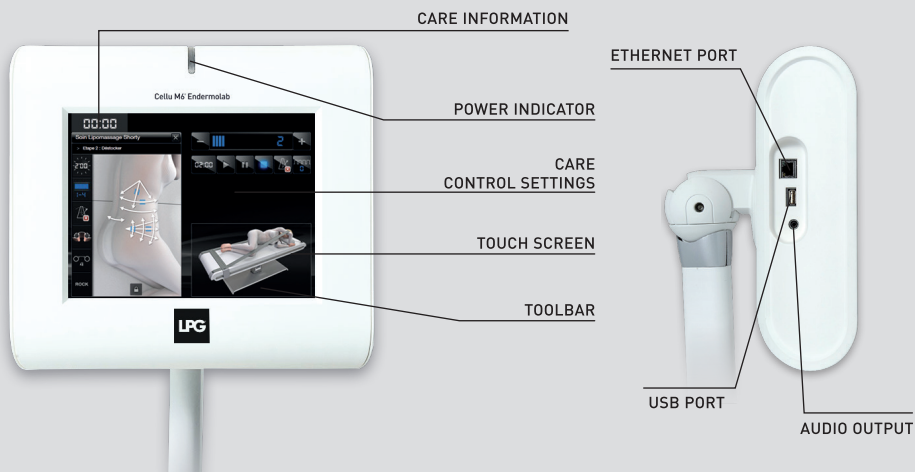


## → ERGODRIVE HEAD



### ⚠ ATTENTION

For detailed instructions on using the touch interface, refer to the touch interface operating manual received during training and available from customer service.


→ ADAPTER

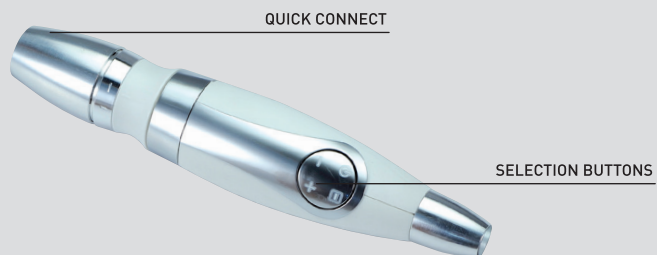

→ HEAD



## → CONNECTION BETWEEN BOX AND TABLE

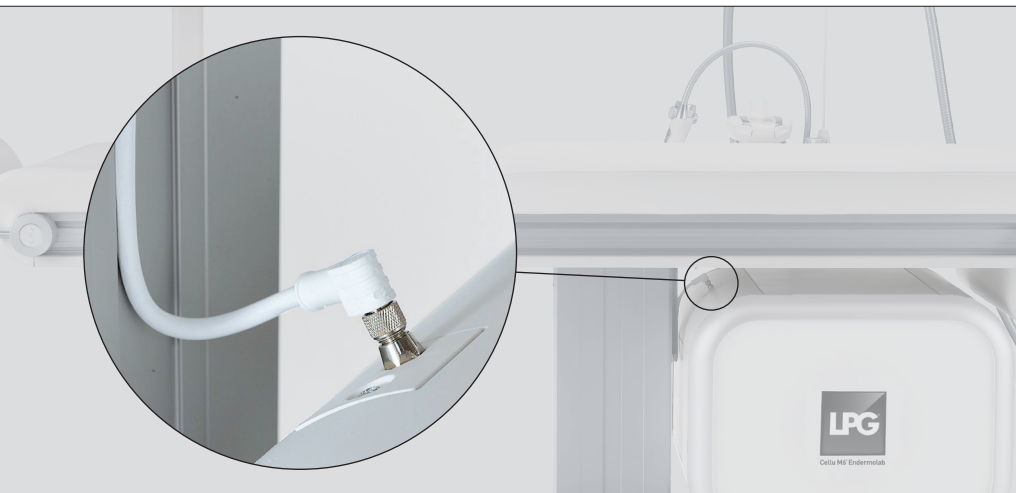

## → ADJUSTABLE BACK

To raise or close the table back, pull the handle on the adjustable back and then raise or lower the back while holding onto the handle.



## → HEIGHT ADJUSTMENT



TABLE UP/DOWN BUTTONS

The table height is adjustable using the controls on the table (see photo below). Simply press the appropriate buttons to move the column up or down.

## → FRONT SIDE ADJUSTMENT

The front side can be adjusted using the articulated dial.


To adjust the front side, just move it to the desired position.



MOLETTE ARTICULATED DIAL

## → SHELF

The Cellu M6 Endermolab s is equipped with a shelf to hold the different care heads

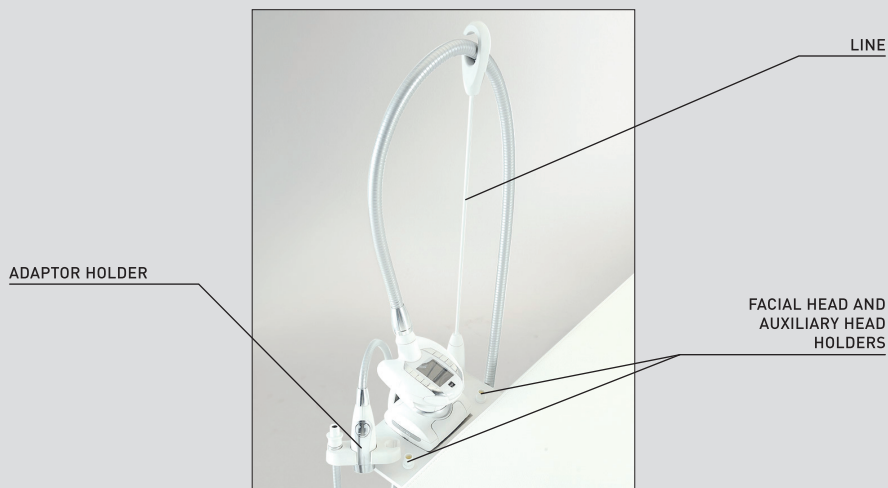

This shelf can be moved along the length of the table by sliding it along the provided rail:





## → STRAPS

Your Cellu M6 Endermolab s comes with a set of straps, including one lateral strap and two longitudinal straps.

These straps should be set up as shown in the photos below.

Attach the lateral strap:



Attach the longitudinal straps:



### ⚠ ATTENTION

Before use, make sure that the corners are properly secured.

## → IMPORTANT SAFETY INFORMATION

All safety precautions must be observed whilst using electrical equipment. Please read all safety notices and precautions prior to use of the equipment.

### **DANGER - TO MINIMISE THE RISK OF ELECTRICAL SHOCK:**

- Always disconnect the equipment from the electrical supply outlet after use and before cleaning and maintenance.

- Check that the supply voltage of the unit indicated on the data plate complies with the mains voltage.
- The unit must be connected by the power cord<sup>1</sup> supplied to a grounded outlet in accordance with current electrical standards. Electrical adapters must not be used with this equipment.

## → WARNING

### **TO MINIMISE THE RISK OF BURNS, FIRE, ELECTRICAL SHOCK OR INJURY**

- The equipment must not be left unattended whilst connected to the electrical supply.
  - Disconnect the unit from the electrical supply if it is not going to be used for a long period.
  - Special attention is required whilst using the equipment with, or in the proximity of children or disabled persons.
  - Never use the unit for purposes other than those recommended by LPG Systems. Only use the care heads supplied with your unit or those recommended by LPG.
  - Never use the equipment if:
    - the electrical power cord or outlet is damaged.
    - the equipment does not function correctly.
    - the equipment is damaged or has fallen or been dropped.
    - the equipment has been exposed to excessive humidity.
- In such cases, return the equipment to an

approved LPG service centre.

- Do not move the unit by pulling the electrical power cord.
- Fully unwind the supply electrical from its support and keep it away from warm surfaces.
- Never use the equipment if the ventilation ports are obstructed. Ensure that the ventilation ports are kept clear of dust or other contaminants.
- Do not allow solid debris, liquid or other foreign bodies to fall or be sucked into the unit, as these could cause damage.
- Never use the equipment on a dusty, uneven floor, or in a moist atmosphere.
- Never use the equipment in the presence of aerosols or oxygen.
- Before disconnecting the unit from the electrical supply, set all controls to the 'off' position and unplug the unit.
- It is prohibited to modify this equipment without prior authorisation from the manufacturer.

### **ATTENTION**

<sup>1</sup>Europe VII-H05VVF3G1,50-C19 & VII-H05VVF3G1,00-C13; Italy I/3/16-H05VVF3G1,50-C19 & I3G-H05VVF3G1,00-C13; Switzerland 23G-H05VVF3G1,50-C19 & 12G-H05VVF3G1,00-C13 ; UK BS13/13-H05VVF3G1,50-C19 & BS13/13-H05VVF3G1,00-C13 ; Japan 498GJ-VCTF3X2,00-C19 & 498GJ-VCTF3X1,25-13V ; USA, Canada, Mexico N5/15-SJT3X14AWG-C19 & 498G-SJT3X18AWG-C13

## → PRECAUTIONS OF USE

## ATTENTION: KEEP THESE INSTRUCTIONS

Your device should be used on clean, healthy skin. It is important to read and respect the following precautions and contraindications before using your device.

- Never touch the client and the device's unprotected cables or connectors simultaneously.
- Never use the auxiliary adapter as a care head or allow it to come into direct contact with the skin.
- Do not use the main head to carry out care on the scalp.
- Only use care heads supplied with your unit or recommended by LPG.
- Only use LPG Systems care garments.
- LPG Systems will not be liable for any inappropriate use of the equipment.
- With respect to cared tissue, some parameters may cause pain or tissue lesions.
- The operator must be particularly attentive to the sensations felt by the person undergoing care.
- The operator must ensure that the parameters (intensity, sequentiality, differential...) are always adapted to the cutaneous tissue being cared.
- Do not put more than 135 kg on the table.
- The controls used to adjust the height of the table can be inhibited if the cable is disconnected.
- When the table is being used without supervision, it should be put in the lowest position to avoid the risk of falling.
- After use, put the table in the lowest position to avoid the risk of falling.
- Do not use the USB and ethernet connections during care.
- Do not operate the unit in unsuitable environmental conditions (see technical specifications).
- Do not use the care heads directly on the skin. Wear the care suit provided by LPG Systems, ENDERMOWEAR.
- **Caution for service:** risk of explosion if the Microbattery Button Cell located on the HMI board (type 3V 190 mAh, VARTA 6 032 101 501) is replaced by an incorrect type. Dispose used Cell according to country regulation.

## → CONTRA-INDICATIONS

- Do not treat open wounds, the eyes, intra-cavity areas, mucous membranes, the genitals or breasts.
- This device is not recommended for pregnant women. In the event of pregnancy, do not treat the lumbar-abdominal region. Consult with a doctor with regard to this care.
- Do not treat a client with an infectious disease, a growing tumour, a phlebitis, a wound, or an infected area.
- Do not treat a client with skin cancer, a visible tumor, or other cancerous lesions. Consult with a doctor in cases where the client has a case history of tumours or is in remission.
- Do not treat inflamed or swollen areas or scars from a recent surgery without medical advice and LPG technical training for the affected areas.
- Do not treat people with circulatory problems without first consulting their doctor.
- Do not treat any swollen or inflamed areas without seeking medical advice and without having had training in specific LPG techniques in this particular area.
- Stop treatment immediately if the client experiences pain and consult a doctor.
- This device should not be used on skin rashes, herpes, inflamed or infected acne, or vitiligo.
- To avoid bruising, exercise caution when determining a client's level of sensitivity and avoid use on clients taking anti-coagulant drugs.
- For a more detailed list of the indications and contra-indications of Endermologie, please refer to the training manuals.
- As this list is not exhaustive, always seek out medical advice in the event of doubt.

### **Contra-indications :**

- Because of the risk of interference, it is important that the professional ensures the client is not equipped with a personal medical device such as a pacemaker.  
If this is the case, the professional should obtain details about the device in question to ensure that any interference will not affect the correct use of the equipment.

### **ATTENTION**

This unit contains programs to help the operator obtain the best anticipated results for each case undergoing care. Under no circumstances may these programs be construed as a guarantee of successful care, which varies, depending on the morphology, physiology and eating behaviour of each client.

## → ELECTROMAGNETIC COMPATIBILITY

- The Cellu M6 Endermolab *S* uses RF energy only for its internal function. Therefore its RF emissions are very low and not likely to cause any interference in nearby electronic equipment.
- The Cellu M6 Endermolab *S* is suitable for use in all establishments including domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
- The Cellu M6 Endermolab *S* must be used on a wooden, concrete or ceramic flooring. If the floor covering is of synthetic material the relative humidity must be at least 30%.
- The Cellu M6 Endermolab *S* must be connected to an electrical supply equivalent in quality to typical commercial or hospital supplies.
- If the operator of the Cellu M6 Endermolab *S* requires continuous function during power supply network failure, it is recommended that an alternative failsafe electrical supply or battery power supply be provided.
- Portable or mobile RF communication devices must not be used in close proximity to the Cellu M6 Endermolab *S* or its cables.
- Interference may be encountered in proximity to devices marked with the following symbol:



[illegible]

## → INDEX

IDENTIFICATION RATING PLATE .....	19
CLEANING THE UNIT .....	20
REPLACING THE FILTER CARTRIDGES AND FOAM .....	21
CONNECTING/DISCONNECTING THE CARE HEADS .....	23
DISCONNECTING THE BOX HOSE .....	24
CONNECTING/DISCONNECTING THE ADAPTER .....	25
ELECTRICAL POWER CORD .....	26
MAINTENANCE LOG SHEET .....	27

## → IDENTIFICATION RATING PLATE


Your unit is identified by two serial numbers shown on the rating plates. These rating plates also show the permitted supply voltage for the unit.


If you need to contact LPG Systems because of a technical problem, please indicate the serial numbers of your Cellu M6 Endermolab s.

These serial numbers provide information on the year and month of manufacture of your unit.


The letter indicates the year the device was manufactured. Z=2009, A=2010, B=2011, etc.


The two digits indicate the production month: 01=January; 02=February; 03=March; etc.

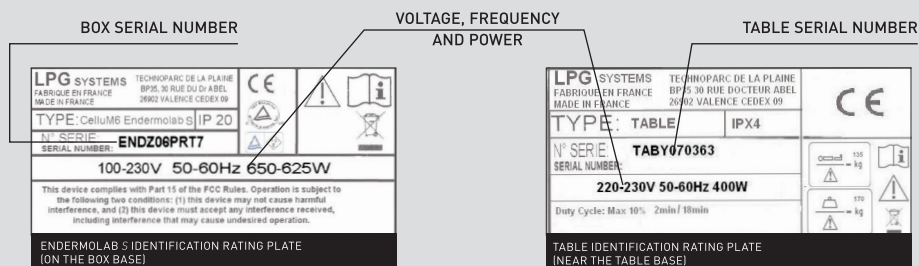



 This icon indicates that the unit was sold after August 13, 2006. In conformity with the 2002/96/CE directive, it cannot be thrown away with standard household waste but must be disposed of by means of recycling.


By doing so, you help the environment by contributing to the conservation of natural resources and the protection of human health.

 This icon indicates that some specific warnings or precautions associated with this device are not on the label.

 This icon means "Refer to the user manual."

 This symbol means that the maximum exterior mechanical load permitted on this equipment is 170Kg.

 This symbol means that the maximum patient weight permitted on this equipment is 135Kg.

 This symbol means « Danger: High Voltage »

### ⚠ ATTENTION

Identification rating plates may vary. The approved one is one on your machine.



## → CLEANING THE UNIT

It is recommended that you clean your unit as often as possible, not only for reasons of hygiene and aesthetics but also because cleaning the unit will help keep it in a good state of repair and extend its useful life.

The device should be cleaned with a damp non-abrasive sponge after each use.

### **Using a vacuum cleaner with a fine nozzle, clean the following sections:**

- Interior of the head storage drawer.
- Interior of the head storage tray.
- Interior of the filter access door.

### **Using a moist sponge, clean the following sections:**

- All the external hoods.
- Hoses.
- The electrical power corde.

### **Using a cloth soaked with a small amount of alcohol-free domestic cleaning product, clean the following sections:**

- Control screen and control panel.
- Interior of the head storage drawer.
- Interior of the head storage tray.
- Interior of the filter access door.

## → REPLACING THE FILTER CARTRIDGE AND FOAM

Your device contains one filter cartridge and one filter foam.  
These components guarantee the efficiency of your unit and prolongs its useful life.

Ensure that it is changed as soon as the command screen displays one of these messages (fig 1-2) :

Icon indicating a filter change is required (fig. 2).



FIG. 1

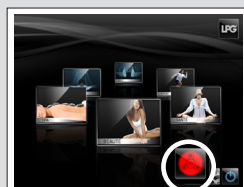


FIG. 2

CHANGE THE FILTER

Access the 'filter change' menu as follows :

Select the 'maintenance' menu by pressing the icon indicated (fig. 3).

Select the 'filter' menu by pressing the icon indicated (fig. 4).

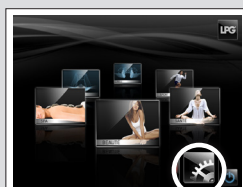


FIG. 3

PRESS THIS ICON



FIG. 4

PRESS THIS ICON

The 'filter change' screen indicates which filter requires changing : (fig. 5).

Once the filter cartridge is replaced, the filter meter should be reset by pressing the icon indicated : (fig. 6).

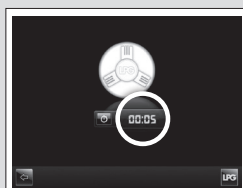


FIG. 5

FILTER LIMIT EXCEEDED

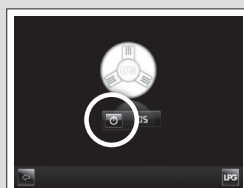


FIG. 6

FILTER METER

## → REPLACING THE FILTER CARTRIDGES

Your device contains one filter cartridge to guarantee the efficiency of your device and to prolong its life.

Be sure to change it as soon as the screen displays a warning message.

Open the filter access door. Unscrew the filter cartridge and replace it with a new one.

Contact LPG Systems Customer Support to stock up on filter cartridges so that you always have spares.



## → REPLACING THE FILTER FOAM

Your device contains two filter foams to guarantee the efficiency of your device and to prolong its life.

Be sure to change them as soon as the screen displays a warning message.

1. Move the cover downward by sliding your hands into the designated notches (as shown in the photo below).
2. Upclip the cover.
3. Replace the filter foams with new ones.



### ATTENTION

The device must never be used without a filter. If no filter is fitted, the device must be switched off.

## → CONNECTING/DISCONNECTING THE MOTORIZED CARE HEADS

To **connect** the heads to the hose, follow the procedure below:

Position the locking ring in the locked position (**fig. 1**).

Position the end of the hose so that the hose key is lined-up with the key slot of the care head connection (**fig. 2**).

Push the hose into the care head connection until it clicks into place.

To **disconnect** the heads, position the locking ring in the unlocked position (**fig. 3**).

Pull the locking ring towards the hose (**fig. 4**).

Carefully remove the hose by pulling it by the white ring (**fig. 5**).

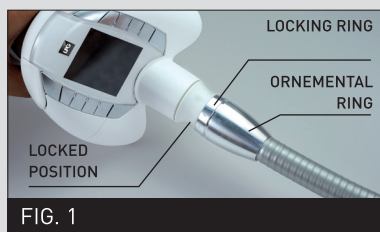
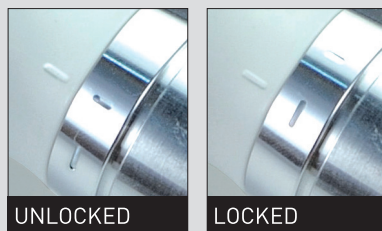


FIG. 1

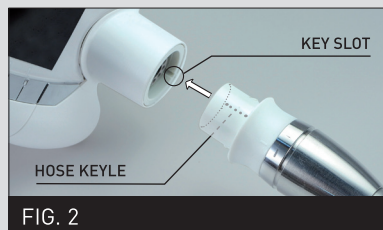


FIG. 2



FIG. 3



FIG. 4

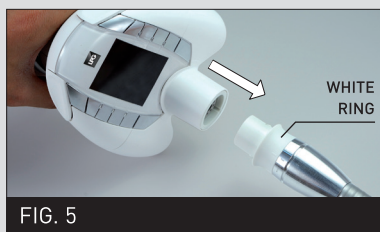


FIG. 5

## → INSTRUCTIONS FOR DISCONNECTING THE HOSE

The hose can be disconnected from the box simply by following the procedure described above:

- Unlock the connection by turning the aluminum ring **(fig. 1)**.
- lifting the aluminum ring **(fig. 2)**.
- and gently removing the hose by pulling on the white ring **(fig. 3)**.




## → CONNECTING/DISCONNECTING THE ADAPTER

To connect or disconnect the hose adapter, follow the procedures below.

Only the auxiliary heads, the micro-nozzle tip, and the Lift heads can be connected to the adapter.

The connection is made with a simple push/pull movement.

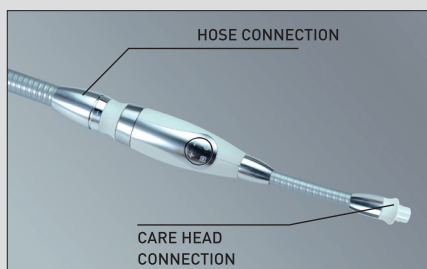

## → POWER CORDS

**Your equipment comes with two power cords with different plugs.**

Before powering on your device, first connect each of the two power cords to their respective base:



C13 Plug: to the table base



C19 Plug: to the box base

Next, connect each of other ends to a standard grounded electrical wall socket.



If the power cords for your device are damaged, please contact LPG Systems Customer Service for replacements.

**LPG Systems Customer Service:**  
**+33 (0)4 75 78 69 89**

### ⚠ ATTENTION

The cord with the rectangular (C19) plug must be connected to the box.

## → MAINTENANCE LOG SHEET

Replacement of filter cartridges: To be done when the warning message appears.

Replacement of Endermolift Kit: To be done when the flaps no longer care the skin properly. They should be replaced after approximately every **20 sessions** of use.

DATE	NO. OF HOURS	OPERATIONS PERFORMED



## → WHAT IF I'VE PROBLEM?

**If your unit is not working properly, proceed with the following checks before calling Customer Services:**

- Is the unit properly connected to a mains plug?
- Is the mains plug live?
- Is the ON switch lit up?
- Are the fuses of the unit in good order?
- Are the filter cartridges clean and correctly placed?
- Is the hose free of obstruction?
- Is the hose properly connected?
- Are the sealing valves of the main head correctly placed, clean and moving?
- Is the Keymodule of the main head correctly fitted?

Once these checks have been carried out and if the malfunction persists, please contact Customer Services of LPG Systems or the nearest authorized dealer, indicating the model of your unit and its serial number. Une fois ces contrôles effectués, si le dysfonctionnement persiste, faire appel au service Client de LPG Systems ou au distributeur agréé le plus proche de chez vous en indiquant le modèle de votre appareil, son numéro de série.

**Service Client de LPG Systems :**  
**N° Azur 0810 786 900**  
**(France uniquement)**  
**ou le +33 (0)4 75 78 69 89**

## → TECHNICAL SPECIFICATIONS

Dimensions; length x width x height	1850 x 700 x 1490 mm
Net weight	140 kg
Maximum set depression	.69 kPa (690 mbar)
Cooling	by mechanical ventilation incorporated in the pump
Protection index	IP 20
Electrical protection class	1
Operating temperature	+10°C to +30°C
Storage temperature	-20°C to +70°C
Box electrical features	100-230V / 50-60Hz / 650-625 W

### Operating environment:

Ambient temperature:	10 to 30° C for normal operation.
Ambient relative humidity:	.30 to 75% without condensation.
Atmospheric pressure:	no significant influence for operation.
Max altitude:	2,500 m

### Table electrical features

Voltage (V)	230	220	127	120	100	100
Frequency (Hz)	50	60	60	60	50	60
Intensity consumed (A)	1	1	1,8	1,8	2,1	2,1

### General characteristics:

Adjustable height: 65 to 90cm from ground  
Back adjustment: 0 to 70°/from horizontale

Unit fitted with patented care heads.

The Cellu M6 Endermolab s is marked  in compliance with the applicable texts and standards as part of the EMC 2004/108/EC and Low Voltage 2006/95/EC directives.

# Cellu M6<sup>®</sup> Endermolab

## CARE HEADS




Registered Trademark

## → INDEX

DESCRIPTION OF THE ERGODRIVE HEAD .....	32
DESCRIPTION OF THE KEYMODULE™ .....	33
DESCRIPTION OF THE ADAPTER .....	36
ERGOLIFT HEAD DESCRIPTION .....	37
ERGOLIFT CHAMBERS DESCRIPTION .....	37
DESCRIPTION OF THE LIFT HEADS .....	38
MAINTENANCE .....	38
CLEANING THE ERGOLIFT HEAD AND ERGOLIFT CHAMBERS .....	39
REMOVING THE FLAPS .....	40
CLEANING THE ERGODRIVE HEAD .....	42
REPLACING THE KEYMODULE™ .....	45

## → DESCRIPTION OF THE ERGODRIVE HEAD

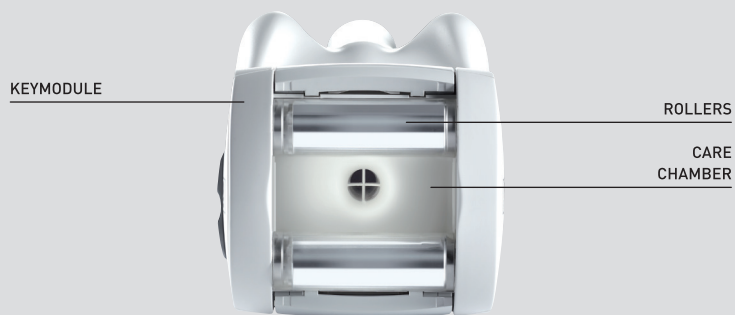

## → DESCRIPTION OF THE KEYMODULE™

The Keymodule is the interchangeable lower section of the Ergodrive head. It comprises the motorised rollers and sealing valves.


You have two Keymodules (KM 80, KM 50), the characteristics of which differ in several ways:

- Diameter and texture of the rollers.
- Roller length.

### Installation:

All Keymodules are designed to be compatible with the care head. Attach the Keymodule as shown below.

To remove the Keymodule release the latches.

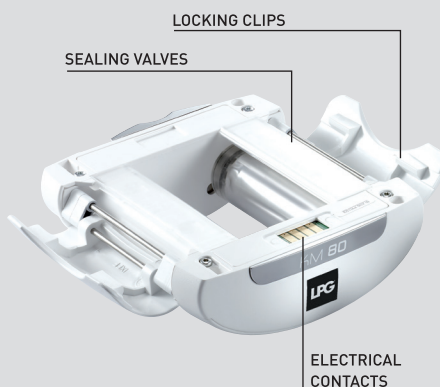

## → SLIDER SETTINGS

The Keymodule has a slider which can be adjusted to 4 positions, making it possible to adjust the spacing between the motorized rollers.

When the slider is positioned to the left (**fig. 1**), this allows the maximum level of mobility in the rollers.

When the slider is positioned to the right (**fig. 2**) the rollers cannot move.

When the slider is in an intermediate position the rollers have reduced mobility.



FIG. 1



FIG. 2

## → FREE ROTATION FUNCTION

The Ergodrive head includes a function that allows the Keymodule to rotate freely.

To do this, lift the lock ring upward until it clicks into position **(fig. 1 - 2)**.

The head can now rotate freely **(fig. 3)**.

To lower the lock ring and lock the position of the head, press the lock key **(fig. 4)**.



FIG. 1



FIG. 2



FIG. 3



FIG. 4

The head rotation can be locked in any of the 4 positions below:



ROTATION 0



ROTATION 1



ROTATION 2



ROTATION 3




ROTATION 4

These four positions can be found by:


- following the preceding instructions for free rotation, then pressing the lock key and rotating the head until it clicks into the desired position.
- lifting the lock ring halfway and then rotating the head to the desired position until it clicks into place.



## → DESCRIPTION OF THE ADAPTER

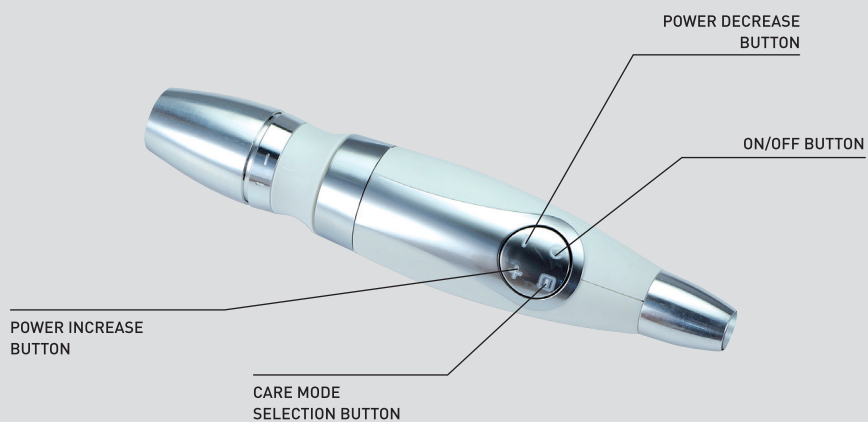


## → ERGOLIFT HEAD DESCRIPTION

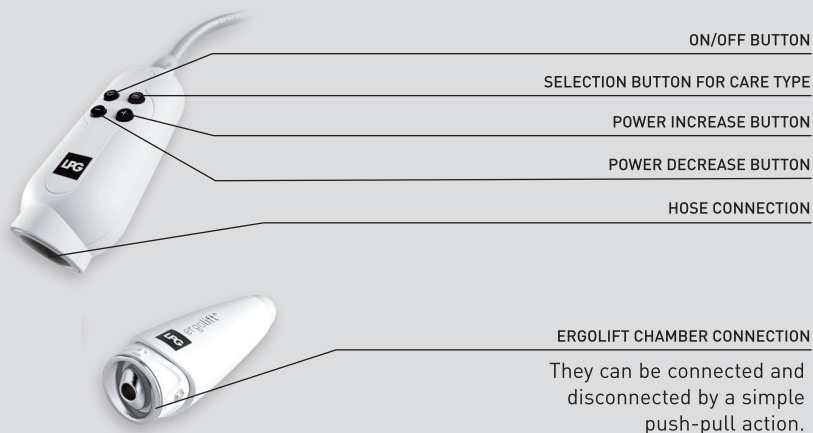

## → ERGOLIFT CHAMBERS DESCRIPTION




**Lift 20**  
Treatment chamber with removable flap

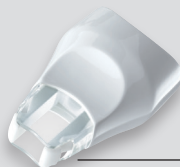

**Lift 10**  
Treatment chamber with removable flap

Only the LIFT20 and LIFT10 can be connected to the Ergolift head. They can be connected and disconnected by a simple push-pull action.

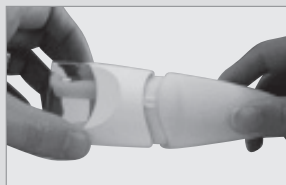

## → DESCRIPTION OF LIFT HEADS

### Adjusting the flap:

To ensure that the flap retains its position, thereby optimizing performance, it is important to adjust the dial settings according to the care intensity:

- Turn the dial from A to E to increase the flap's return force.
- Turn the dial from E to A to decrease the flap's return force.



**TML10**  
WITH REMOVABLE FLAPS



**TML20**  
WITH REMOVABLE FLAPS



**TML30**  
WITH REMOVABLE FLAPS

## → MAINTENANCE

For reasons of hygiene, the care heads should be cleaned after each use, using antiseptic wipes with a bactericidal and fungicidal solution.

Special attention must be given to the cleanliness of the parts that are in contact with the client.

## → CLEANING THE ERGOLIFT HEAD AND ERGOLIFT CHAMBERS



For reasons of hygiene, the treatment heads should be cleaned after each use, using antiseptic wipes impregnated with a bactericidal and fungicidal solution. Special attention must be given to the cleanliness of the parts that are in contact with the patient.

Before each use, clean the flap and Ergolift chamber:

1. Disconnect the chamber from the Ergolift treatment head. **(fig. 1)**
2. Remove the flap thanks to the dedicated tool. **(fig.2)**
3. Thoroughly clean the Ergolift chamber, the flap and the tool for at least one minute with the wipes as describe here below. **(fig.3)**
4. Put the flap back in the Ergolift chamber by following the same steps in the reverse order **(fig.4)**



## → CLEANING THE ERGOLIFT HEAD AND ERGOLIFT CHAMBERS (CONT'D)

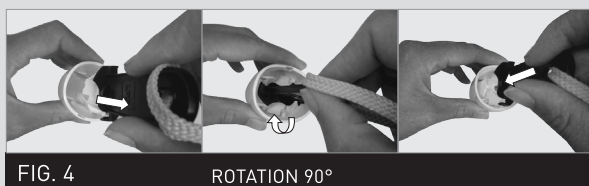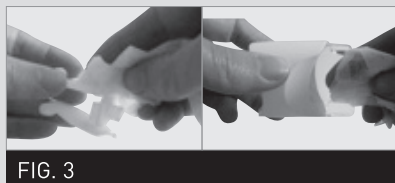


### ⚠ ATTENTION

The use of aggressive products, such as acetone, trichloroethylene, or alcohol at 90°, and abrasive sponges, ultrasound or UV lamps is strictly prohibited. All cleaned and/or disinfected heads should be placed in the storage drawer to avoid any confusion.

## → REMOVING THE TML20 AND TML30 FLAPS

1. Take the Lift head and insert the beveled side of the correct removal tool into the opening between the flaps.
2. Pull out the tool, and the flaps will come out with it.
3. Remove the flaps from the tool and clean them carefully with a wipe.
4. Take the smooth side of the tool and place the flaps back into position on the tool.
5. Insert the flaps back into the care head until they are in the correct.

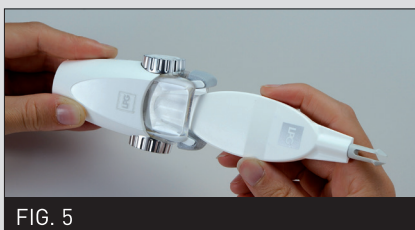

## → REMOVING THE TML10 FLAPS

1. Take the Lift head and insert the beveled side of the correct removal tool into the opening between the flaps.
2. Pull out the tool, and the flaps will come out with it.
3. Remove the flaps from the tool and clean them carefully with a wipe.
4. Take the smooth side of the tool and place the flaps back into position on the tool.
5. Insert the flaps back into the care head



FIG. 1



FIG. 2

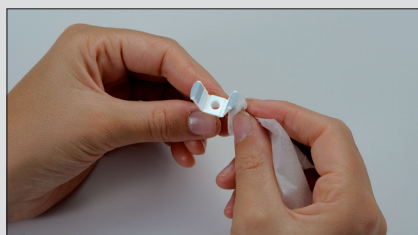


FIG. 3



FIG. 4




FIG. 5

## → CLEANING THE ERGODRIVE HEAD

### Cleaning the sealing valves:

1. Release the Keymodule (fig. 1).
2. Move the rollers to the center.
3. Remove the corresponding sealing valve by handling it as shown on the photo. Repeat the operation for the other valve (fig. 2).
4. Meticulously clean the flaps and their housing for at least 1 minute using LPG wipes soaked in a bactericide and fungicide solution (fig. 3 - 4).

Replace the sealing valves after **100 hours** operation.

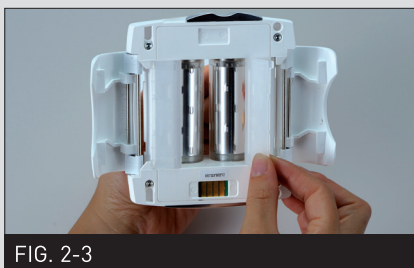



## → CLEANING THE ERGODRIVE HEAD (CONT'D)

### Cleaning the Keymodule:

1. Turn over the Keymodule and thoroughly clean the following parts for at least 1 minute with the LPG wipes soaked in a bactericide and fungicide solution:
  - a) The housing on both sides of the rollers (**fig. 1**)
  - b) The rollers (rotate them manually to clean the entire surface) (**fig. 2**).
  - c) The sealing ring between the Keymodule and head housing.
  - d) The plastic covering on the Keymodule.
2. Turn the Keymodule again and refit the sealing valves.
3. Ensure that the the sealing joint between the Keymodule and main head is also cleaned.
4. Check that the electrical contacts are clean and dry and proceed in the reverse sequence to refit the Keymodule onto the main head.
5. Clean the storage drawer using LPG wipes, then place the head in it.



FIG. 1



FIG. 2

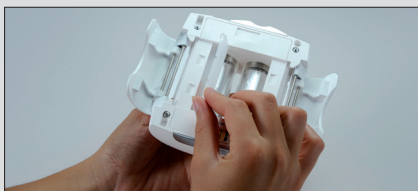


FIG. 3



FIG. 4

## → REPLACING THE KEYMODULE™

The Keymodule is a high-technology unit comprising numerous mobile micro-mechanical parts.

The unit must be returned to our Technical Support Center if certain worn items require replacing.

The head may start to lose some of its characteristics at approximately **1000 hours** of operation.

### ATTENTION

- All the procedures described in this section must be carried out with the machine turned off and the power cord unplugged.
- Do not use corrosive products such as acetone, trichloroethylene, or rubbing alcohol, nor abrasive sponges.

## → ENDERMOWEAR

LPG Endermowear, available in several sizes for both men and women, is a clothing specially designed for superior care of the entire body. For personal use, it ensures perfect hygiene, and its opaque areas protect client's privacy during the care. The Endermowear unique composition ensures an excellent grip of the skin for facilitating smoother movements of the care head as well as protecting it.

The products come with a re-enforced bag with empty client name tag for privacy. Once personalized, it becomes customer property, and can be a multisession-use garment requiring client's washing between each session. Require the client to check and follow the washing instructions printed on bag's tag.

## → GENERAL WARRANTY CONDITIONS

You have recently acquired an appliance distributed by LPG Systems or an LPG Systems approved distributor. It is the purchaser/user's responsibility to find out from the local authorities the conditions and professional qualifications that should be met before using the appliance.

The purchase of this equipment implies the legal acceptance by the purchaser/professional user of these general warranty conditions. If the appliance was sold to you by an approved LPG Systems distributor, the purchaser/user should refer to the supplier's warranty conditions. These may in no way increase the undertakings made in these present warranty conditions. The warranty can only be implemented and is only valid if the warranty slip has been duly filled out and returned to LPG Systems within two weeks of delivery, irrespective of the country. Warranty slips that are only partially completed will be rejected.

The appliance is guaranteed against manufacturing flaws and defects in the raw materials. The warranty extends for the shorter of the following two periods: one (1) year OR two thousand (2000) hours of use from the invoice date. During this period, LPG Systems undertakes to exchange or repair free of charge, as quickly as possible, any part that LPG Systems acknowledges as

defective, however LPG Systems does not undertake to replace the entire appliance. Traveling and living expenses for our technicians and transportation costs of the appliance or parts to and from the after-sales service workshop are not covered by this warranty.

Replacements and repairs performed within this warranty, with or without immobilization of the equipment, shall not have the effect of extending the warranty period. Replaced parts become the property of LPG Systems or the approved distributor. No compensation shall be paid for loss of use. The purchaser/user is required to allow LPG Systems the necessary time and means to carry out all repairs and deliveries of replacement spare parts. Failure to comply will absolve us from our obligations under the warranty.

The only courts of competent jurisdiction are those within the legal district of LPG Systems' head office regardless of any jurisdiction clauses in any other document.

## → GENERAL WARRANTY CONDITIONS (CONT'D)

**Warranty exclusions:**

- Damage occurring during transportation. Transportation of this equipment and/or spare parts is at the recipient's own risk. Before taking delivery, it is the recipient's responsibility to verify the state of the goods and to make a claim against the transport company in the manner usual in the delivery country.
- Non-observance of the installation and operating instructions, failure to carry out maintenance and/or negligence in maintaining the appliance and/or its filter cartridges, connection to a faulty electricity supply or a non-earthed electricity supply or a power supply whose voltage is different to the one indicated on the appliance.
- If an appliance is sold before the end of the warranty period, the warranty is transferred to the purchaser for the remaining warranty period, on the condition that:
  - i) the original invoice is provided.
  - ii) That the initial vendor is informed of the sale.
- Modification, mounting of accessories or dismantling of the equipment.
- Any operation and/or intervention not specified in the LPG Systems Operating Instructions and performed on the equipment by the purchaser/user and/or any party not approved by LPG Systems.
- Use of consumables, spare parts, inappropriate components or parts not supplied by LPG Systems.
- Blockage of the appliance through aspiration of a foreign body.
- Normal wear and tear of any of the equipment's parts resulting from normal usage.
- Falls, impacts, lightning, fire, force majeure, water damage and natural disasters.

## → LIMITATION AND EXONERATION OF LIABILITY

Non-compliance with the general guarantee conditions during the term of the warranty and following expiry of the latter, may lead to LPG Systems being exonerated of any liability in the event of damage attributed to the products supplied.

LPG Systems will not be held liable with respect to equipment/material losses or physical accidents (i), following installation that does not comply with the statutory or regulatory provisions of the country where the unit is to be used or (ii) which could jeopardize a Cellu M6 Endermolab s unit, which was the subject of intervention work not scheduled in the LPG Systems operator's manual and/or carried out by the operator or a third party not authorized by LPG Systems.

LPG Systems will be absolved of its liability in the event of use exceeding the level of professional competence/qualification of the operator or resulting from the incorrect use of the unit.

## → WARRANTY ACTIVATION

You can activate your warranty online by connecting to our warranty webpage:

<http://warranty.lpgsystems.com>

## → OR FILL IN THE FORM AND RETURN TO LPG SYSTEMS



Name\*: .....

Address\*: .....

Country\*: .....

Tel\*: .....

Email: .....

Type of business: .....

Profession: .....

Type of unit: **Cellu M6 ENDERMOLAB S**

Serial number\*: .....

Date: .....

The personal data collected in this form are sent to LPG Systems, which is responsible for processing it in order to manage customers relations, including after-sales service and warranties. Information with an asterisk must be provided in order for this form to be processed. According to modified French law 78-17 from January 6, 1978 relating to computers, digital files, and freedoms, also known as the "Informatique et Libertés" law, you have a right of access, rectify, and remove personal data about you by contacting LPG Systems in writing at the following address: LPG SYSTEMS – 30, rue Dr Abel – Technoparc de la Plaine – 26000 VALENCE (FRANCE).

### ⚠ ATTENTION

To validate the warranty, detach this slip and return to the address below within 15 days following use of the unit:

**LPG SYSTEMS SA - Technoparc de la Plaine  
30, rue du docteur Abel - CS 90035 - 26902 VALENCE Cedex 9 - France**



**HEADQUARTERS: LPG SYSTEMS SAS**

TECHNOPARC DE LA PLAINE  
30, RUE DU DR. ABEL - CS 90035 - 26902 VALENCE CEDEX 09 - FRANCE  
TEL.: +33 (0)4 75 78 69 00 - FAX: +33 (0)4 75 42 80 85

**INTERNATIONAL/MARKETING**

ECOLUCIOLES - BAT A  
955 RTE DES LUCIOLES - BP 243 - 06905 SOPHIA-ANTIPOLIS - FRANCE  
TEL.: +33 (0)4 92 38 39 00 - FAX: +33 (0)4 92 96 09 65

